

SNAP HAPPY PURSE

Materials needed:

Lining - Batting - Outer material - Metal tape measure from dollar store

Finished purse $7\frac{1}{2} \times 6\frac{3}{4}$


Cut lining and facing 9x17 inches

Cut batting and outer material 9x13 inches

Cut 2 four inch squares for tabs out of lining material

Fold the four inch square and sew on one side, turn material inside out and press to make a point to put into center of purse

Center batting and outer material on lining leaving a 2 inch border on each end.

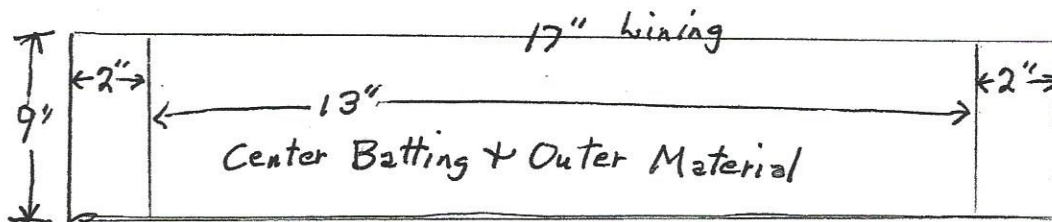

Fold lining with small hem over batting and outer material inserting tabs in the middle of the purse. Leave enough space for metal tape measure, sew the hem. Do this on both ends.

Cut metal tape measure with old sharp scissors to fit into hem (7 inches approx.)

Round the edges of metal tape measure with old sharp scissors and cover with masking tape and insert into the hem. Make sure that tape measure cups together to form snap affect. Covering the edges with making tape prevents poking through the material.

Sew edges of material on wrong side. This is a great place to serge the ends.

Smaller version: $6\frac{1}{2} \times 5\frac{1}{2}$

8 x $14\frac{1}{2}$ lining

8x11 batting and outer material

